



# HUSKY<sup>®</sup>

COM M E R C I A L

## C400H-WE-UK-HS User manual



**To ensure safe operation, please read this user manual thoroughly before use.**

© Husky. Husky reserve the right to change specifications at any time without notice.  
Images used are for illustration only. Stock not included.





# Welcome to your new Husky

Thank you for buying this Husky appliance. It has been designed and manufactured for many years of trouble-free service.

Operation is very simple, but please take a few minutes to read this user manual. It contains important safety information, and tips to ensure you receive the best possible performance from your Husky appliance.

## CONTENTS

|  |    |
|--|----|
| Important notes.....   | 3  |
| Warning! Risk of electrical shock hazard.....                  | 3  |
| Disposal of old appliances.....                                | 3  |
| WEEE compliance.....   | 3  |
| Safety instructions and warnings.....                          | 3  |
| How to minimise the energy consumption of your appliance ..... | 4  |
| Before using for the first time .....                          | 4  |
| Troubleshooting.....   | 5  |
| C400H-WE-UK-HS   |    |
| Operating instructions.....                                    | 6  |
| Temperature Adjustment.....                                    | 6  |
| Diagram.....   | 7  |
| Circuit Diagram.....   | 8  |
| Important Maintenance.....                                     | 9  |
| Service Assistance.....  | 9  |
| How to contact Husky.....                                      | 12 |

## Important Notes

### WARNING: RISK OF ELECTRICAL SHOCK HAZARD

**USERS IN EUROPE:** This refrigeration unit must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the unit is properly earthed. Stop using the chiller immediately if electric shock is felt when touching the cabinet.



### DISPOSAL OF OLD APPLIANCES

**BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.**

**WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH OLD APPLIANCES. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.**

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions.

Ensure the pipework of your appliance is not damaged prior to disposal. You can contribute to the environmental awareness by insisting on an appropriate non-polluting method of disposal.

### WEEE COMPLIANCE

Husky appliances are authorised to carry the CE (Conformité Européene) and WEEE (Waste Electrical and Electronic Equipment Directive) symbols.



The WEEE symbol on this appliance indicates that the product must not be disposed of with household waste. To help prevent

possible harm to health and the environment, the product must be disposed of by recycling methods authorised as environmentally safe. For more information on how to dispose of this product appropriately, contact your dealer or the recycling department at your local authority.

Husky appliances and their components undergo strict product testing by independent companies to comply with all applicable local and international regulatory standards.

### SAFETY INSTRUCTIONS & WARNINGS

Before switching on your Husky appliance, read the information in this user manual carefully. The user manual contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this user manual in a safe place for future reference. If you ever sell this appliance, hand this user manual to the new owner.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.

- Do not use the appliance if it is damaged. If you are in any doubt, consult an engineer.
- Connection and installation of your Husky appliance are to be carried out in strict compliance with the relevant instructions in this user manual.



GB

Technical Support: 01455 555340 (UK)

- Make sure there is a suitable power outlet with proper grounding to power the appliance.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug this appliance by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by a qualified engineer. Inadequate repairs may be dangerous.
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If refrigerant comes into contact with the eyes it may cause serious eye injury.
- Do not obstruct or cover the ventilation grille.
- Do not allow children to play with the appliance, or to sit on it or hang onto the door.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the unit by a person responsible for their safety.

## HOW TO MINIMISE THE ENERGY CONSUMPTION OF YOUR APPLIANCE

- Energy consumption will be lower if the appliance stands in a well ventilated space and in particular if the vents on the appliance are clear of obstruction.
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc as this will increase energy consumption.
- Keep the appliance door closed as much as possible.
- Setting the thermostat colder means higher energy consumption, so set only as cold as you really require.
- Do not overfill the appliance - overfilling means the cool air cannot circulate freely inside the appliance which may slow the process of chilling/freezing the contents and make the appliance less efficient.
- Defrost the appliance if frost can be seen building up inside - frost will increase energy consumption and make the chilling/freezing process slower (see section 'Defrosting').
- Turn the appliance off completely if it is not required for a period of days (or longer) to avoid wasting energy.

## BEFORE USING FOR THE FIRST TIME



**IMPORTANT: Before switching the appliance on, we recommend you allow it to stand upright for 8 hours. Failure to do this may result in damage to the appliance.**

- To ensure correct operation, it is important that the appliance is level. Use a spirit level to check.
- Before operation, we recommend that the appliance is cleaned for reasons of hygiene and to remove any residue left from manufacture.
- For good circulation, vents must not be blocked. Keep a minimum of 100mm of clear space around the appliance. Your Husky appliance should be placed on flat and firm surface for quieter operation.
- Do not expose the appliance to direct sunlight or a heat source such as ovens, radiators, heaters, etc.
- Do not under any circumstances place heated food or beverages in your Husky appliance.
- Do not open the door more often than necessary to lessen the escape of cold air.
- For better air circulation, do not overfill the appliance.
- Adjust the thermostat according to the amount of product and the ambient temperature.



## Troubleshooting

Before calling Technical Support, please check the following points as you may be able to solve any problem yourself.

| Problem  | Possible Cause  | Action   |
|--|---|--|
| The appliance does not work properly.  | The appliance is not plugged in.  | Connect the plug to the power supply                                 |
|  | The plug and/or the power cable are faulty.   | Call Husky (see back page) or a qualified engineer.                  |
|  | The fuse has blown.   | Replace the fuse with one of the same rating.                        |
|  | The appliance is faulty.  | Call Husky (see back page) or a qualified engineer.                  |
| The appliances internal temperature is too high or too low.  | The wrong temperature is selected.  | Check the thermostat and adjust the set temperature.                 |
|  | The factory default settings for the thermostat are incorrect.                          | Check the thermostat and adjust the set temperature.                 |
|  | The condenser is blocked by an accumulation of dust.                                    | Clean using a vacuum cleaner and soft brush attachment               |
|  | The doors are not fully closed.   | Check the appliance is level and the door seals are not damaged.     |
|  | The appliance is too close to a heat source or the ambient temperature is too high.     | Move the appliance to a more suitable location.                      |
|  | The ventilation grille is blocked.  | Move the appliance to improve air circulation.                       |
| The appliance is noisy in operation or makes unusual noises.<br><br>• <i>Note: It is normal to hear some noises as refrigerant flows through the compressor.</i> | The appliance is not on a level, firm surface, or the unit may be touching other items. | Check location and position using a spirit level.                    |
|  | The appliance is vibrating against a neighbouring object.                               | Relocate the appliance or the object.                                |
| Condensation on appliance exterior   | Occurs when humidity is high and water particles in the air contact cold surfaces.      | Wipe away condensation with a dry cloth.                             |
| Inner surfaces are wet   | The door may be opened too often or kept open too long.                                 | Try to minimise opening of the doors for better cooling performance. |



GB

Technical Support: 01455 555340 (UK)

## C400H-WE-UK-HS

### Operating Instructions

#### OPERATION

Place the shelves firmly on their supports. The maximum load for a shelf is 35kg. Check that the appliance is functioning properly before installing and filling it. The thermostat is located inside the appliance.


**Note: Never put warm or hot foods/drinks into the appliance.**

#### TEMPERATURE ADJUSTMENT

- To adjust the temperature inside the chiller compartment, adjust the temperature control dial on the inside, top left of the chiller. Normally use the chiller with temperature MID/4.


If the cooling performance is inadequate, turn the temperature dial in the direction of MAX/8. If it is too cold, turn the dial in the direction of MIN/1.

When you need the appliance to stop running temporarily, please turn the temperature control dial in the direction of 0/OFF.

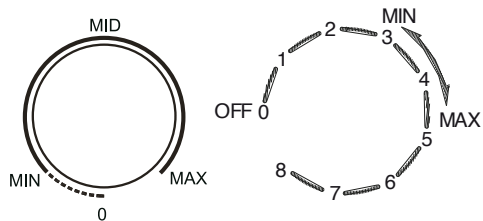



## Diagram

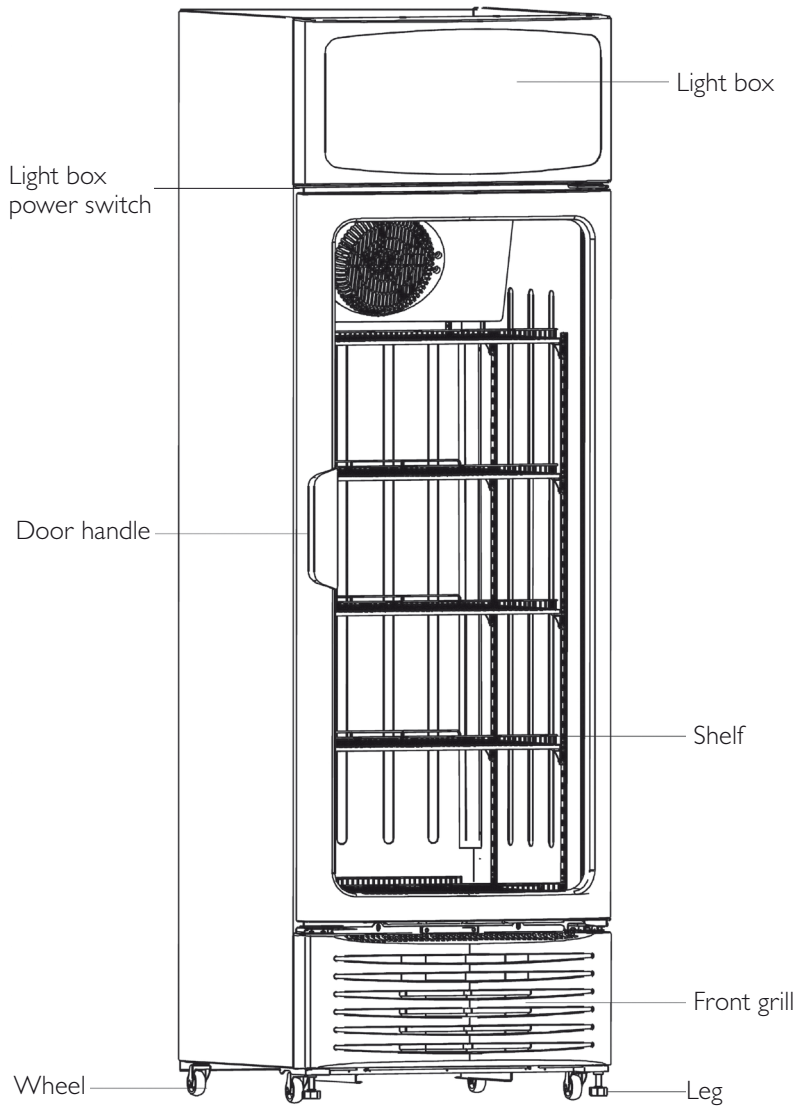




GB

Technical Support: 01455 555340 (UK)

## C400H-WE-UK-HS

### Circuit Diagram

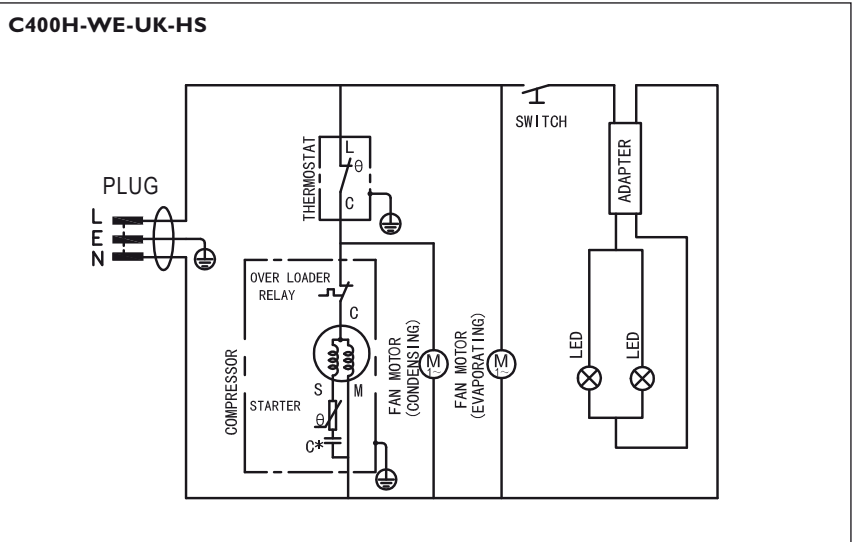





## IMPORTANT – MAINTENANCE

The condenser and the compressor compartment **MUST** be cleaned quarterly in order to ensure appropriate temperature control and maintain energy efficiency. Use a vacuum cleaner fitted with a soft brush attachment to remove dust carefully from the condenser, the components and grilles.

The external and internal surfaces of the appliance should be cleaned regularly. Switch the appliance off and disconnect the plug from the mains socket. Clean the external and internal surfaces of the appliance with a mild soap solution, then wipe dry. **Do NOT** use cleansers containing chlorine or other harsh cleansing agents, as these can damage the stainless steel surfaces and components. Use mild soapy water to clean the gasket and seals.

## SERVICE ASSISTANCE

The cooling system is a hermetically sealed circuit and does not require any maintenance other than regular cleaning (see 'Maintenance').

If the appliance fails to work, first check the troubleshooting guide on page 5. If you cannot locate the reason for the failure, please contact your supplier, stating the model and serial number of the cabinet. You may find this information on the rating plate, which is affixed on the back wall or inside the appliance.



Technical Support: 01455 555340 (UK)

---

## Notes





Technical Support: 01455 555340 (UK)

**GB**

## Notes





Welcome to Husky, the home of smart refrigeration. We are a leading global refrigeration specialist with over 25 years experience in quality refrigeration for convenience and hospitality professionals, and we have a great range of chillers for the home too. You'll find Husky products all over the world, so whatever your requirements we're sure to have a good looking energy-efficient model that's perfect for you.

**HUSKY**<sup>®</sup>  
C O M M E R C I A L

[www.husky.co.uk](http://www.husky.co.uk)

**HELPLINE/TECHNICAL SUPPORT**

Tel: 01455 555340 (Monday to Friday 0900 – 1700).

Email: [sales@husky.co.uk](mailto:sales@husky.co.uk)

**SALES**

Tel: 01455 555340 (Monday to Friday 0900 – 1700).

Email: [sales@husky.co.uk](mailto:sales@husky.co.uk)

**OUT-OF-WARRANTY SPARES**

Email: [sales@husky.co.uk](mailto:sales@husky.co.uk)