



HUSKY[®]
C O M M E R C I A L

User manual – XG Solid Lid Chest Freezer



To ensure safe operation, please read this user manual thoroughly before use.

© Husky. Husky reserve the right to change specifications at any time without notice.

Images used are for illustration only. Stock not included.





Welcome to your new Husky

Thank you for buying this Husky freezer. It has been designed and manufactured for many years of trouble-free service.

Operation is very simple, but please take a few minutes to read this user manual. It contains important safety information, and tips to ensure you receive the best possible service from your Husky unit.

CONTENTS

Important Notes.....	3
Warning! Risk of electrical shock hazard.....	3
Disposal of old freezers.....	3
WEEE Compliance.....	3
Safety instructions and warnings.....	3
Before using for the first time.....	4
Troubleshooting.....	5
Operating Instructions.....	6
Illustration.....	7
Circuit diagram.....	7





All models

Important Notes

WARNING: RISK OF ELECTRICAL SHOCK HAZARD

USERS IN EUROPE: This freezer unit must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the unit is properly earthed. Stop using the unit immediately if electric shock is felt when touching the cabinet.



DISPOSAL OF OLD FREEZERS

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE LID AND DISCARD SEPARATELY.

WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH OLD FREEZERS. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.

Before disposing of an old freezer please make sure it is switched off and safe. Unplug the freezer and break any locks in order to avoid children becoming trapped.

Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a freezer can be recycled.

Contact your local waste disposal depot for proper disposal of an old freezer and contact your local authority or dealer if you have any questions.

Ensure the pipework of your freezer is not damaged prior to disposal. You can contribute to the environmental awareness by insisting on an appropriate non-polluting method of disposal.

WEEE COMPLIANCE

Husky freezers are authorised to carry the CE (Conformité Européenne) and WEEE (Waste Electrical and Electronic Equipment Directive) symbols.

The WEEE symbol on this unit indicates that the product must not be disposed of with household waste. To help prevent

possible harm to health and the environment, the product must be disposed of by recycling methods authorised as environmentally safe. For more information on how to dispose of this product appropriately, contact your dealer or the recycling department at your local authority. Husky freezers and their components undergo strict product testing by independent companies to comply or exceed all applicable local and international regulatory standards.



SAFETY INSTRUCTIONS & WARNINGS

Before switching on your Husky freezer, read the information in this user manual carefully. The user manual contains important observations relating to the assembly, operation and maintenance of the unit.

Please keep this user manual in a safe place for future reference. If you ever sell this unit, hand this user manual to the new owner.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.





- Do not use the unit if it is damaged. If you are in any doubt, consult an engineer.
- Connection and installation of your Husky unit are to be carried out in strict compliance with the relative instructions in this user manual.
- Make sure there is a suitable power outlet (230 volts, 13 amps outlet) with proper grounding to power the freezer.
- For safety, the unit must be properly earthed in accordance with specifications.
- Always remember to unplug the unit before cleaning. Never unplug this unit by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by a qualified engineer. Inadequate repairs may be dangerous.
- Do not damage any parts of the unit which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If refrigerant comes into contact with the eyes it may cause serious eye injury.
- Do not obstruct or cover the ventilation grille.
- Do not allow children to play with the unit, or to sit on it.
- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the unit by a person responsible for their safety.

HOW TO MINIMISE THE ENERGY CONSUMPTION OF YOUR APPLIANCE

- Energy consumption will be lower if the appliance stands in a well ventilated space and in particular if the vents on the appliance are clear of obstruction.
- Do not place the appliance in direct sunlight or near a heat source such as ovens, radiators, heaters, etc as this will increase energy consumption.
- Keep the freezer lid closed as much as possible.
- Setting the thermostat colder means higher energy consumption, so set only as cold as you really require.
- Do not overfill the appliance - overfilling means the cool air cannot circulate freely inside the appliance which may slow the process of freezing the contents and make the appliance less efficient.
- Defrost the appliance if frost can be seen building up inside - frost will increase energy consumption and make the freezing process slower (see section 'Defrosting').
- Turn the appliance off completely if it is not required for a period of days (or longer) to avoid wasting energy.



BEFORE USING FOR THE FIRST TIME

IMPORTANT: Before switching the unit on, we recommend you allow it to stand upright for 8 hours. Failure to do this may result in damage to the unit.

- Remove the wooden pallet and the packing.
- To ensure correct operation, it is important that the unit is level. Use a spirit level to check.
- Before operation, we recommend that the cabinet is cleaned for reasons of hygiene and to remove any residue left from manufacture.
- For good circulation, vents must not be blocked. Keep a minimum of 150mm of clear space around the freezer. Your Husky unit should be placed on flat and firm surface for quieter operation.
- Do not expose the unit to direct sunlight or a heat source such as ovens, radiators, heaters, etc.
- Do not under any circumstances place heated food or beverages in your Husky freezer.
- Do not open the solid lid more often than necessary to lessen the escape of cold air.
- For better air circulation, do not overfill the unit.
- Adjust the thermostat according to the amount of product and the ambient temperature.





Troubleshooting

Before calling Technical Support, please check the following points; you may be able to solve any problem yourself.

Problem	Possible Cause	Action
The appliance does not work properly.	The appliance is not plugged in.	Connect the plug to the power supply.
	The plug and/or the power cable are faulty.	Call your supplier or a qualified engineer.
	The fuse has blown.	Replace the fuse with one of the same rating.
	The appliance is faulty.	Call your supplier or a qualified engineer.
The appliance's internal temperature is too high or too low.	The wrong temperature is selected.	Check the controller and adjust the set temperature.
	The factory default settings for the controller are incorrect.	Call your supplier or a qualified engineer.
	The condenser is blocked by an accumulation of dust.	Clean using a vacuum cleaner and soft brush attachment (see page 6)
	The doors are not fully closed.	Check the appliance is level and the seals are not damaged.
	The appliance is close to a heat source or the ambient temperature is too high.	Move the appliance to a better location and check it is out of direct sunlight.
	The ventilation grille is blocked.	Move the appliance to improve free movement of air.
The appliance is noisy in operation or makes unusual noises. • <i>Note: It is normal to hear some noises as refrigerant flows through the compressor.</i>	The appliance is not on a level, firm surface, or the unit may be touching other items.	Check location and position using a spirit level.
	The appliance is vibrating against a neighbouring object.	Relocate the appliance or the object.
Outer surfaces are wet	The appliance may be close to a water source or leak.	Dry surfaces thoroughly and move the appliance.
Inner surfaces are wet	The door may be opened too often or kept open too long.	Try to minimise opening of the doors for better cooling performance.






Operating Instructions

TO ADJUST THE TEMPERATURE

If temperature adjustment is required, the controller can be found at the bottom of the front face of the freezer (see Fig.4 on page 7). If the temperature is set colder than it is required then the compressor will run constantly. This is not recommended due to increased wear on parts and it will also increase energy consumption of your freezer.

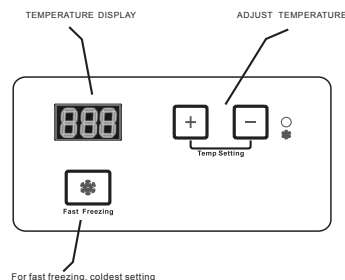

DEFROSTING

Remove any stock to a suitable back-up freezer. Switch your Husky chest freezer off and disconnect the plug from the mains socket. Remove the drain plug (see Fig. 2 on page 7) and place a tray under the drain to collect melted water. Empty the tray regularly.

Allow any ice to melt naturally. DO NOT use boiling water, corrosive detergents, abrasive scourers, wire brushes, electric heaters or sharp or metal objects to remove ice or hasten defrosting. These may damage the unit and void the warranty.

When all the ice is clear and waste water removed, refer to 'Cleaning' below to sanitise and dry the unit thoroughly. The freezer may then be reconnected and switched on. Wait at least two hours before returning any stock to the unit.

CLEANING

The condenser and the compressor compartment MUST be cleaned quarterly. Use a vacuum cleaner fitted with a soft brush attachment to remove dust carefully from the condenser, the components and grilles.

The external and internal surfaces of the unit should be cleaned regularly. Switch the unit off and disconnect the plug from the mains socket. Clean the external and internal surfaces of the unit with a mild soap solution, then wipe dry. Do NOT use cleansers containing chlorine or other harsh cleansing agents, as these can damage the stainless steel surfaces and components. Use mild soapy water to clean the gasket and seals.

GETTING SERVICE ASSISTANCE


The cooling system is a hermetically sealed circuit and does not require any maintenance other than regular cleaning (see 'Cleaning').

If the unit fails to work, first check the power supply. If you cannot locate the reason for the failure, please contact your supplier, stating the model and serial number of the cabinet.






Technical Support: 01455 555340 (UK)

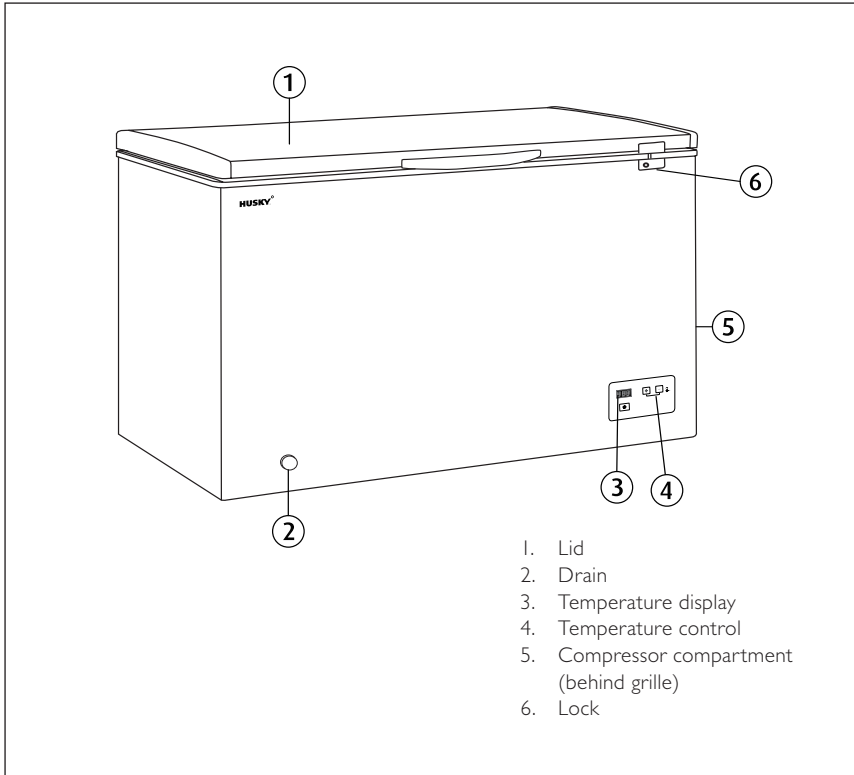

Circuit Diagram

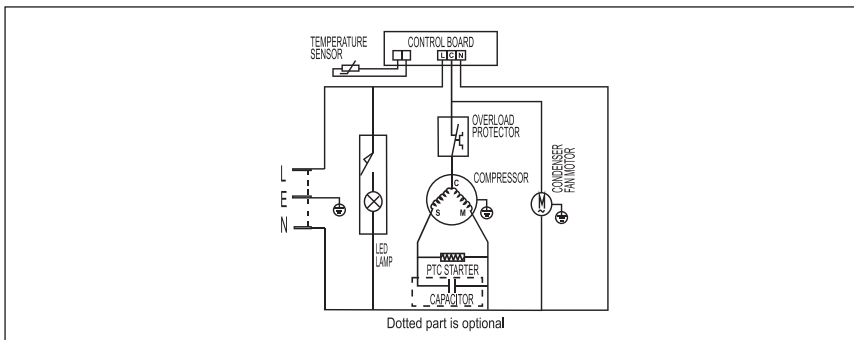



Welcome to Husky, the home of smart refrigeration. We are a leading global refrigeration specialist with over 25 years experience in commercial refrigeration for convenience and hospitality professionals. Whatever your requirements, we're sure to have a good looking energy-efficient model that's perfect for you.

HUSKYTM
C O M M E R C I A L

www.husky.co.uk

HELPLINE/TECHNICAL SUPPORT

Tel: 01455 555340 (Monday to Friday 0900 – 1700).

Email: sales@husky.co.uk

SALES

Tel: 01455 555340 (Monday to Friday 0900 – 1700).

Email: sales@husky.co.uk

OUT-OF-WARRANTY SPARES

Email: sales@husky.co.uk

020224

